

# pinkfong BABY SHARK™

## Step & Sing Piano Dance Mat

### USER MANUAL

Age: 2+

nickelodeon



© Smart Study Co., Ltd. All Rights Reserved. Pinkfong™ and Baby Shark™ are trademarks of Smart Study Co., Ltd., registered or pending rights worldwide.  
© 2020 Viacom International Inc. All Rights Reserved. Nickelodeon is a trademark of Viacom International Inc.



WowWee Group Limited.

Energy Plaza, 301A-C, 92 Granville Road T.S.T. East, Hong Kong

WowWee Canada Inc.

3700 Saint Patrick Street, Suite 206, Montreal QC, H4E 1A2, Canada

Consumer Service:

<https://support.wowwee.com>

### INTRODUCTION

Thank you for purchasing the Official Pinkfong™ Baby Shark™ Step & Sing Piano Dance Mat by WowWee®!

Sing, dance and learn to play music with the Step & Sing Piano Dance Mat! Based on the global song sensation with over 6 billion views, this musical toy has 10 giant piano keys and helps teach music and counting. Step or press on the keys and play in the two different activity modes: Music Mode and Learning Mode. Take a few minutes to review this user manual before you start playing!


### FEATURES

#### Package Contents:

- 1 x Baby Shark™ Step & Sing Piano Dance Mat
- 1 x Bonus Baby Shark Sound Sheet
- 1 x User Manual

#### Required:

- 3 x AAA "LR03 / R03" 1.5V Batteries (not included)
- 1) On/Off Switch
- 2) Music Mode Button (MM)
- 3) Learning Mode Button (LM)  
Character & Instrument buttons play different sounds depending on each mode:
- 4) Daddy Shark (LM) / Trumpet Sound (MM)
- 5) Mommy Shark (LM) / Flute Sound (MM)
- 6) Grandma Shark (LM) / Piano Sound (MM)
- 7) Grandpa Shark (LM) / Drum Sound (MM)
- 8) Baby Shark (LM) / Violin Sound (MM)
- 9) Piano Keyboard: count to 1-10 (LM) or play a musical scale (MM)
- 10) Volume Control
- 11) Song Sheet Holder
- 12) Speaker

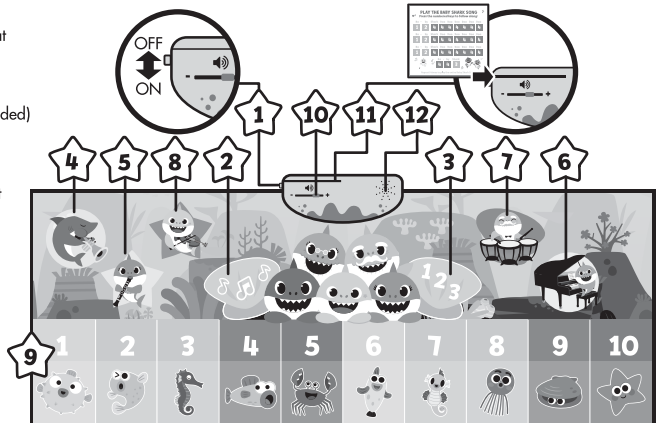

### HOW TO PLAY

#### POWER ON AND OFF

Toggle the On/Off Switch to power on and off.

#### MUSIC MODE

Music Mode is the default mode when you power on.

If you aren't in Music Mode, press the Music Mode button ONCE to enter music mode. In Music Mode, the Character & Instrument buttons play the Baby Shark song chorus with different instruments. Step or press on the piano keys to play along - or combine sounds to play your own song!

Bonus: use the Bonus Baby Shark Song Sound Sheet to learn how to play the Baby Shark song all by yourself!

Press the Music Mode button TWICE to play the full Baby Shark song!

#### LEARNING MODE

Press the Learning Mode button ONCE to start the Learning Mode. In Learning Mode, the Character & Instrument buttons name the Shark Family characters and you can count 1 to 10 by pressing the piano keys.

Press the Learning button TWICE to play the full Shark 123 song!


Fold your Step & Sing Piano Dance Mat for easy storage when playtime is over.

If your Step & Sing Piano Dance Mat stops playing or the volume becomes choppy or hard to hear, it may be time to replace the batteries. Refer to the section included in this manual for step-by-step instructions.

#### SLEEP MODE

The Step & Sing Piano Dance Mat will enter sleep mode after 20 seconds of inactivity.

## BATTERY REPLACEMENT

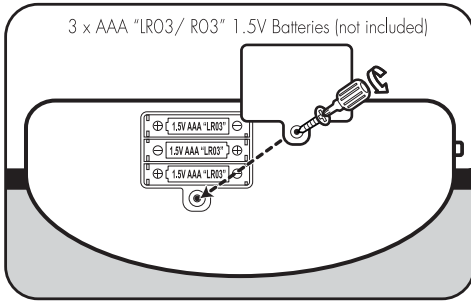

**Battery Diagram/Installation**

1. Lay your Step & Sing Piano Dance Mat down so that the battery compartment faces upwards. Step & Sing Piano Dance Mat requires 3 x AAA "LR03 / R03" 1.5V Batteries (not included).
2. Using a Phillips screwdriver (not included) remove the screw on the battery compartment cover.
3. Remove any existing batteries and insert new batteries according to the diagram. Ensure that the positive and negative polarities match the illustrations inside the battery compartment.
4. Replace the battery compartment cover and tighten screw using the screwdriver. Do not over-tighten.

### IMPORTANT BATTERY INFORMATION:

- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries [standard (Carbon-Zinc), Alkaline or rechargeable] or rechargeable batteries of different capacities.
- Remove rechargeable batteries from the toy before recharging them.
- Rechargeable batteries are only to be charged under adult supervision.
- Please respect the correct polarity, (+) and (-).
- Do not try to recharge non-rechargeable batteries.
- Do not dispose of batteries into fire.
- Replace all batteries of the same type/brand at the same time.
- The supply terminals are not to be short-circuited.
- Remove exhausted batteries from the toy.
- Batteries should be replaced by adults.
- Batteries should be recycled or disposed of as per state and local guidelines.
- Protect the environment by not disposing of this product with household waste. Check your local authority for recycling advice and facilities.



Take note of the following when playing with your Pinkfong™ Baby Shark™ Step & Sing Piano Dance Mat:

- Do not immerse the Step & Sing Piano Dance Mat in water or any other form of liquid.
- If your Step & Sing Piano Dance Mat gets dirty, you can spot clean with a clean cloth; do not submerge.
- As a best practice, we recommend tying up any loose hair when playing with the Step & Sing Piano Dance Mat.
- Please ensure children are supervised when playing with the Step & Sing Piano Dance Mat to avoid any injury.

**VISIT BABYSHARK.WOWWEE.COM**  
TO CHECK OUT OTHER OFFICIAL PINKFONG™ BABY SHARK™ TOYS!

Manufactured and distributed by WowWee Group Limited. © Smart Study Co., Ltd. All Rights Reserved. Pinkfong™ and Baby Shark™ are trademarks of Smart Study Co., Ltd., registered or pending rights worldwide. © 2020 Viacom International Inc. All Rights Reserved. Nickelodeon is a trademark of Viacom International Inc. "Baby Shark" song arranged by Pinkfong and KizCastle, and performed by KizCastle, Bonnie Catherine Han, Yantzi Michael David, Alison Lea Bender, Sarah Bock and Finn Phoenix.

Customer Service Website: <https://support.wowwee.com>

We recommend that you retain our address for future reference.

Product and colors may vary.

Packaging printed in China.

CAN ICES-3(B)/NMB-3(B)

MADE IN CHINA

### CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### NOTE

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try and correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or experienced radio/TV technician for help

This Device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

For these purposes, the party responsible is:

WowWee USA Inc.

7855 Fay Avenue, Suite 310, La Jolla, CA, USA 92037

1-800-310-3033

For full list of inputs, please visit <http://wowwee.com/babysark>

For warranty information, please visit <http://wowwee.com/information/warranty>

**WARNING!** This equipment may experience difficulty and/or memory loss when subjected to any electrostatic discharge, radio frequency interference, or sudden power surge/interruption. The user is encouraged to reset the equipment should any of these occur.