

pinkfong BABY SHARK

DANCING DOLL USER MANUAL

WowWee Group Limited.
Energy Plaza, 301A-C, 92 Granville Road,
T.S.T. East, Hong Kong

WowWee Canada Inc.
3700 Saint Patrick Street, Suite 206, Montreal,
QC, H4E 1A2, Canada

Customer Service: <https://support.wowwee.com>

More information on: <http://wowwee.com>

Age: 2+

Package Contents:

1 x Dancing Doll;
1 x User Manual



Required:

3 x "LR6/AA"
Batteries (included)



Sleep Mode

When the Shark is idle for 45 secs, it will play a short sound. Sleep mode will then be activated after 3 minutes. Press the right shark fin, call, clap or press the buttons to wake up from Sleep mode.

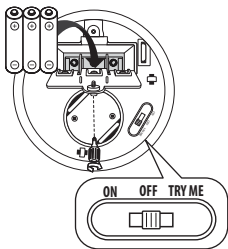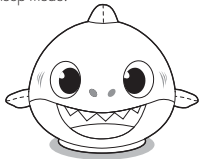

Requires 3 x "LR6 / AA" Batteries (included).

Battery Diagram/Installation

Installing or changing batteries:

1. Lay dancing doll down so that the battery compartment faces upwards. Requires 3 x "LR6 / AA" Batteries (included).
2. Using a Phillips screwdriver (not included) remove the screws on the battery compartment cover.
3. Remove any existing batteries and insert new batteries according to the diagram. Ensure that the positive and negative polarities match the illustrations inside the battery compartment.
4. Replace the battery compartment cover and tighten screws using the screwdriver. Do not over-tighten.

CE



Manufactured and distributed by WowWee Group Limited. PinkFong™ and all product names, designations and logos are trademarks of Smart Study Company Limited. Copyright 2018 Smart Study Company Limited. All rights reserved. Patent Pending.

IMPORTANT BATTERY INFORMATION:

- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries [standard (Carbon-Zinc), Alkaline or rechargeable] or rechargeable batteries of different capacities.
- Remove rechargeable batteries from the toy before recharging them.
- Rechargeable batteries are only to be charged under adult supervision.
- Please respect the correct polarity, (+) and (-).
- Do not try to recharge non-rechargeable batteries.
- Do not dispose of batteries into fire.
- Replace all batteries of the same type/brand at the same time.
- The supply terminals are not to be short-circuited.
- Remove exhausted batteries from the toy.
- Batteries should be replaced by adults.
- Batteries should be recycled or disposed of as per state and local guidelines.
- Protect the environment by not disposing of this product with household waste. Check your local authority for recycling advice and facilities.



LOW BATTERY INDICATORS:

When the batteries grow weak, Dancing Doll will become slow and unresponsive. When this happens. Power OFF and replace all batteries.

Manufactured and distributed by WowWee Group Limited. PinkFong™ and all product names, designations and logos are trademarks of Smart Study Company Limited. Copyright 2018 Smart Study Company Limited.

All rights reserved. Patent Pending.

Customer Service Website:

<https://support.wowwee.com>

We recommend that you retain our address for future reference.

Product and colors may vary.

Packaging printed in China.

CAN ICES-3(B)/NMB-3(B)

MADE IN CHINA

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does

cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try and correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or experienced radio/TV technician for help

This Device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

For these purposes, the party responsible is:

WowWee USA Inc.

7855 Fay Avenue, Suite 310, La Jolla, CA, USA 92037
1-800-310-3033

For full list of inputs, please visit <http://wowwee.com>

For warranty information, please visit
<http://wowwee.com/information/warranty>

WARNING! This equipment may experience difficulty and/or memory loss when subjected to any electrostatic discharge, radio frequency interference, or sudden power surge/interruption. The user is encouraged to reset the equipment should any of these occur.