





QUICK START GUIDE

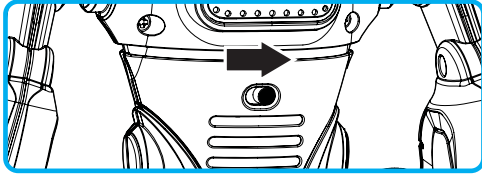


Power On

Toggle the switch to the ON position.

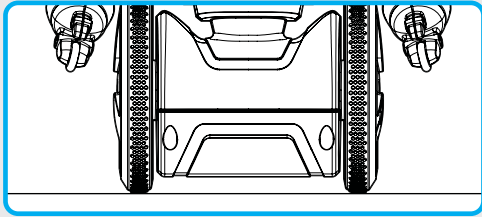


Balance

Place MiP™ Arcade's wheels on a flat surface. Without letting go, MiP™ Arcade will detect the surface and initiate self balance. Let go as soon as MiP™ Arcade gains traction.

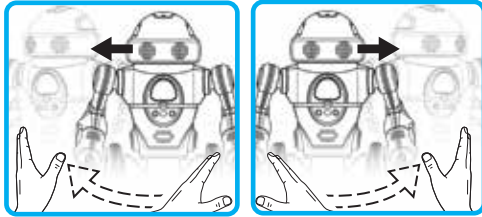


Use Gesture Control

Swipe left or right in front of MiP™ Arcade's chest to initiate turns.

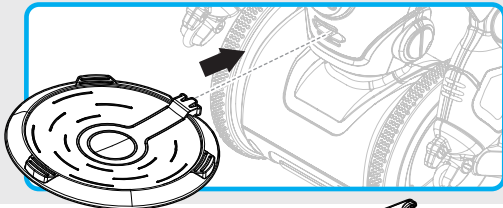


Tray Mode


Insert tray attachment into MiP™ Arcade's waist to activate Tray Mode. Stack and balance!

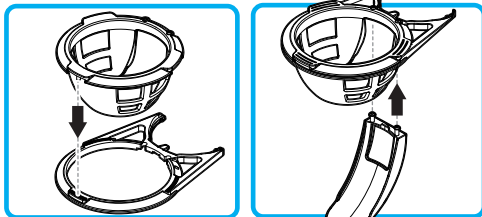

Basketball Mode


Assemble and insert the basketball hoop into MiP™ Arcade's chest to activate Basketball Mode. Shoot basketballs through the hoop to score!

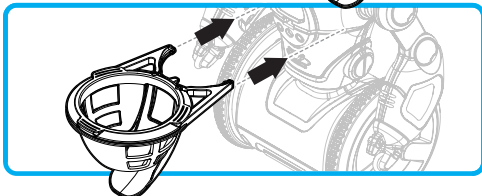

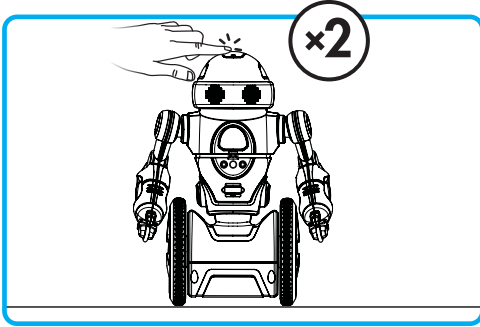


Dance Mode

Double tap the head to make MiP™ Arcade dance!

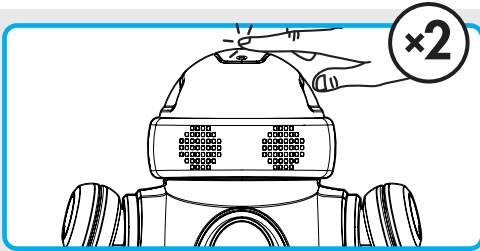

Record Mode

When MiP™ Arcade isn't balancing, tap the head twice to trigger record mode. Record up to 3 seconds of audio and hear MiP™ Arcade repeat back to you.

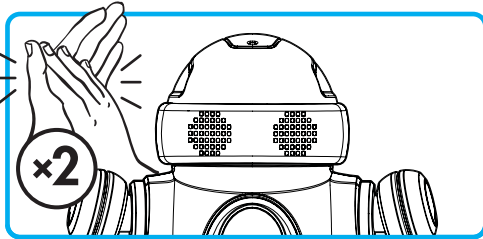

Free Roam Mode

Double clap to activate Free Roam. MiP™ Arcade will roam around and avoid obstacles for up to a minute.



Download the MiP™ Arcade App!

Over 20+ games to test your mind, memory and reflexes!

A BLE (Bluetooth ® Low Energy) device is required. After downloading, ensure your device has Bluetooth turned on to connect wirelessly to MiP™ Arcade.

