

nickelodeon



pinkfong BABY SHARK™ Dancing DJ

© Smart Study Co., Ltd. All Rights Reserved. Pinkfong® and Baby Shark™ are trademarks of Smart Study Co., Ltd. © 2019 Viacom International Inc. All Rights Reserved. Nickelodeon is a trademark of Viacom International Inc.



WowWee Group Limited.
Energy Plaza, 301A-C, 92 Granville Road T.S.T. East, Hong Kong
WowWee Canada Inc.
3700 Saint Patrick Street, Suite 206, Montreal QC, H4E 1A2, Canada

Consumer Service:
<https://support.wowwee.com>

USER MANUAL

 
 
Age: 2+

INTRODUCTION

Thank you for purchasing the Official Pinkfong® Baby Shark™ Dancing DJ by WowWee®! The Dancing DJ plays 7 fun Baby Shark™ songs and popular remixes, including the viral hit Baby Shark™ Song, the global sensation with over 5 billion views! Turn your playroom into a dance floor with the 3 fun games: Dance, Play and Learn! Take a few minutes to review this user manual before you start playing!

OVERVIEW

Package Contents: 1 x Baby Shark Dancing DJ;
1 x User Manual
Required: 4 x AA "LR6" 1.5V
Batteries (included)

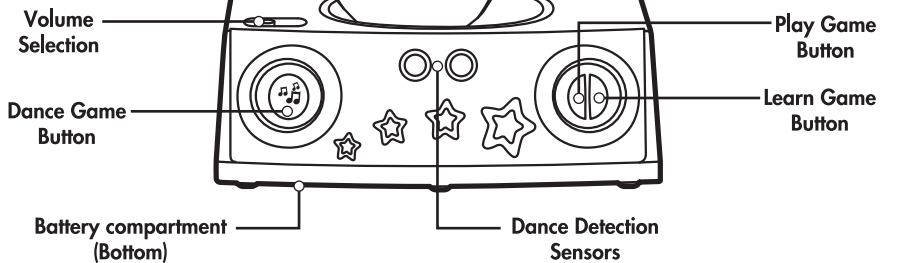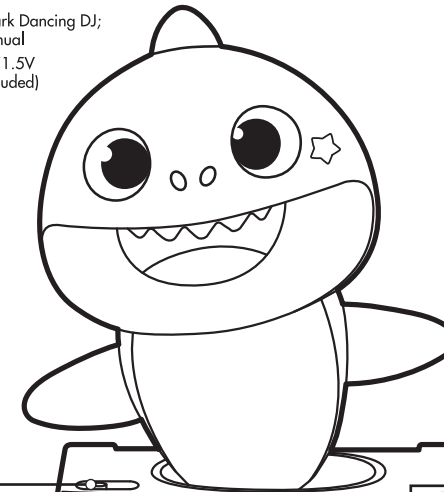

WARNING! This equipment may experience difficulty and/or memory loss when subjected to any electrostatic discharge, radio frequency interference, or sudden power surge/interruption. The user is encouraged to reset the equipment should any of these occur.

Manufactured and distributed by WowWee Group Limited. © Smart Study Co., Ltd. All Rights Reserved. Pinkfong® and Baby Shark™ are trademarks of Smart Study Co., Ltd. © 2019 Viacom International Inc. All Rights Reserved. Nickelodeon is a trademark of Viacom International Inc.

"Baby Shark" song arranged by Pinkfong® and KizCastle, and performed by KizCastle, Sarah Bock, Andy Degan, Finn Phoenix and Bommie Catherine Han.

Customer Service Website: <https://support.wowwee.com>

We recommend that you retain our address for future reference.

Product and colors may vary.

Packaging printed in China.

CAN ICES-3(B)/NMB-3(B)

MADE IN CHINA

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try and correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or experienced radio/TV technician for help

This Device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

For these purposes, the party responsible is:

WowWee USA Inc.
7855 Fay Avenue, Suite 310, La Jolla, CA, USA 92037
1-800-310-3033

For full list of inputs, please visit <http://wowwee.com/babyshark>

For warranty information, please visit <http://wowwee.com/information/warranty>

 


61225US02TOP_MIM


Take note of the following when playing with your Pinkfong® Baby Shark™ Dancing DJ:

- Do not immerse the Baby Shark™ Dancing DJ in water or any other form of liquid.
- If your Baby Shark™ Dancing DJ gets dirty, you can spot clean with a clean cloth; do not submerge.
- As a best practice, we recommend tying up any loose hair when playing with the Baby Shark™ Dancing DJ. To avoid discomfort or injury, do not place the Baby Shark™ Dancing DJ on or near a person's head or face.

GETTING STARTED

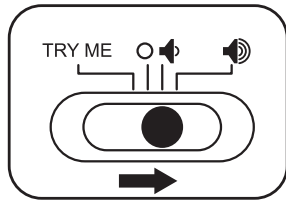

ON
Low Volume

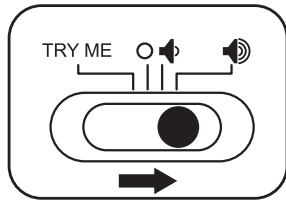 

ON
High Volume

The volume can be adjusted by sliding the Volume Control switch to the high or low volume setting.

HOW TO PLAY

DANCE GAME



TO ACTIVATE: Press the DANCE button to start the Dance Game.

MUSIC CHOICES: Press the DANCE button again to switch songs. Songs for this game are the Baby Shark™ Official DJ Jauz Remix (default), Baby Shark™ EDM and Baby Shark™ Song.

THE GOAL: Collect all the stars!

HOW TO PLAY: When the music starts, the LED Stars will indicate Level 1. Dance directly in front of Baby Shark™ (make sure that you are close to the special dance detection motion sensors on the front of the DJ console). When you move, Baby Shark™ moves and encourages you to keep dancing by giving you more star points. There are 4 Levels (indicated when the LED Stars light up). In this game each LED Star is worth 5 star points. If you keep dancing, Baby Shark™ will continue to dance even faster. If you stop dancing, Baby Shark™ will dance slower, prompt you to keep up, and then stop dancing. If you walk away, Baby Shark™ will stop dancing and prompt you. Keep dancing to collect all 20 star points!

PLAY GAME




TO ACTIVATE: Press the PLAY button to start the Play Game.

MUSIC CHOICES: Press the PLAY button again to switch songs. Songs for this game are Disco Sharks (default) and the Baby Shark™ Remix.

THE GOAL: Keep all 4 Stars lit at all times!

HOW TO PLAY: Listen to Baby Shark's instructions. Make sure that you are close to the special dance detection motion sensors on the front of the DJ console. If you move when Baby Shark™ says "Freeze" you lose a star. But don't worry, you can gain a star back by following Baby Shark's instructions! If you already have 4 stars then you have "fir-tastic" listening skills!

LEARN GAME

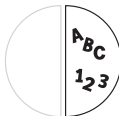

TO ACTIVATE: Press the LEARN button to start the Learn Game.

MUSIC CHOICES: Press the LEARN button again to switch songs. Songs for this game are Shark 123 (default) and Shark ABC.

THE GOAL: Learn ABCs and 123s while collecting Star Points!

HOW TO PLAY: When the music starts, the LED Stars will indicate Level 1. Dance directly in front of Baby Shark™ (make sure that you are close to the special dance detection motion sensors on the front of the DJ console). When you move, Baby Shark™ moves and will keep dancing and singing educational songs. Can you dance and learn your ABCs and 123s? As you sing and learn you will collect Star Points (4 Levels). If you keep dancing, Baby Shark™ will continue to dance even faster. If you stop dancing, Baby Shark™ will dance slower, prompt you to keep up, and then stop dancing. If you walk away, Baby Shark™ will stop dancing and prompt you. Keep dancing to learn what Baby Shark™ has to teach you!

Note: You can stop the Dancing DJ from playing music or dancing at any time by either:

- Press and hold the Dance Game button, or
- Press both the Play Game and Learn Game buttons at the same time.

FREQUENTLY ASKED QUESTIONS

Q: Does the Dancing DJ work better on the table or the floor?

A: It can work on both! Just make sure to keep dancing! Baby Shark™ will let you know if you're too far!

Q: How far away should someone stand in front of the Dancing DJ in order for it to detect motion and dance moves?

A: Baby Shark will prompt you to come closer if you are too far!

Q: When do I change the batteries?

A: When your Dancing DJ moves slower than normal or sounds irregular, that indicates that the power is low and that the batteries should be replaced.

Q: The music volume is low and it's difficult to hear the instructions.

A: Make sure the On/Off switch is set to the High Volume setting to better hear Baby Shark's songs and instructions.

SHOW OFF YOUR DANCE MOVES!

 
Share on social media using the hashtag **#BabySharkDJ!**

Ask a parent's permission before posting any images or videos of children online.

VISIT **BABYSHARK.WOWWEE.COM**

TO CHECK OUT OTHER OFFICIAL PINKFONG® BABY SHARK™ TOYS!

BATTERY INFORMATION

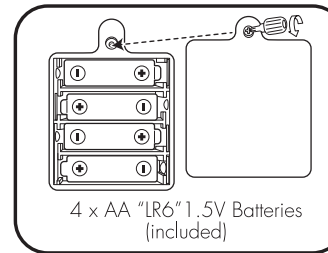

Battery Diagram/Installation

- Lay your Dancing DJ down so that the battery compartment faces you. Dancing DJ requires 4 x AA "LR6" 1.5V Batteries (included).
- Using a Phillips screwdriver (not included) remove the screws on the battery compartment cover.
- Remove any existing batteries and insert new batteries according to the diagram. Ensure that the positive and negative polarities match the illustrations inside the battery compartment.
- Replace the battery compartment cover and tighten screws using the screwdriver. Do not over-tighten.

IMPORTANT BATTERY INFORMATION:

- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries [standard (Carbon-Zinc), Alkaline or rechargeable] or rechargeable batteries of different capacities.
- Remove rechargeable batteries from the toy before recharging them.
- Rechargeable batteries are only to be charged under adult supervision.
- Please respect the correct polarity, (+) and (-).
- Do not try to recharge non-rechargeable batteries.
- Do not dispose of batteries into fire.
- Replace all batteries of the same type/brand at the same time.
- The supply terminals are not to be short-circuited.
- Remove exhausted batteries from the toy.
- Batteries should be replaced by adults.
- Batteries should be recycled or disposed of as per state and local guidelines.
- Protect the environment by not disposing of this product with household waste. Check your local authority for recycling advice and facilities.

