

Pixie Belles™

WARNING

Keep away from hair, jewelry & loose clothing. May become entangled

POWER ON:

Press your Pixie Belles heart to turn her on "HELLO"
Her default mode is Nurture Mode
Play with your Pixie Belles in 3 different modes

POWER OFF:

Press her heart for 3 seconds to power her down

3 PLAY MODES

1 NURTURE MODE



Care for your Pixie Belles in Nurture Mode "YAY YAY!"

FEATURES:

- Tap or double tap back
- Pet once or pet continuous
- Hold back
- Hold mouth and back at same time
- Clap or double clap
- Tap mouth or hold
- Blow in face

Press heart to switch to Spin Mode "SPIN SPIN!"

- She will spin as long as you are talking or clapping
- Double tap her back and she will switch directions
- Hold her mouth for as long as you want her to spin after the kiss
- Blow in her face for different reactions

2 SPIN MODE



3 DANCE MODE



Press heart to switch to Dance Mode "CHA CHA!"

Activate 6 different dances and songs:

1. Tap back
2. Pet back
3. Hold down on back
4. Clap
5. Double clap
6. Tap mouth

EMERGENCY STOP

Press & hold heart button for 3 seconds (or double-tap back) to make your Pixie Belles stop spinning in any mode