 


BATTERY REPLACEMENT

NOTE: Make sure the main power button is set to OFF prior to changing the batteries. Ask a parent or adult for help. To install or change your Robosapien™ Remix batteries:

1. Lay Robosapien™ Remix down so that the battery compartment faces upwards. Robosapien™ Remix requires 4 x AAA "LR03/RO3" batteries (not included).
2. Use a Phillips screwdriver (not included) to remove the screws on the battery compartment door.
3. Remove any existing batteries and insert new batteries according to the diagram. Ensure that the positive and negative polarities match the illustrations inside the battery compartment.
4. Replace the battery compartment door and replace the screws using the screwdriver. Do not over-tighten.

4 x 1.5V
"AAA/LR03/RO3"
Batteries (not included)

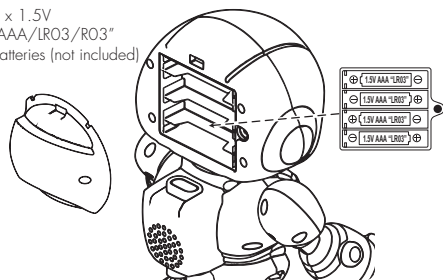

Robosapien™ Remix Battery Diagram/Installation

IMPORTANT INFORMATION

IMPORTANT BATTERY INFORMATION:

- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries [standard (Carbon-Zinc), Alkaline or rechargeable] or rechargeable batteries of different capacities.
- Remove rechargeable batteries from the toy before recharging them.
- Rechargeable batteries are only to be charged under adult supervision.
- Please respect the correct polarity, (+) and (-).
- Do not try to recharge non-rechargeable batteries.
- Do not dispose of batteries into fire.
- Replace all batteries of the same type/brand at the same time.
- The supply terminals are not to be short-circuited.
- Remove exhausted batteries from the toy.
- Batteries should be replaced by adults.
- Batteries should be recycled or disposed of as per state and local guidelines.
- Protect the environment by not disposing of this product with household waste. Check your local authority for recycling advice and facilities.



Manufactured and distributed by WowWee Group Limited. Robosapien™ Remix and all product names, designations, and logos are trademarks or registered trademarks of WowWee Group Limited. Copyright 2020 WowWee Group Limited. All rights reserved. Patent Pending.

Customer Service Website: <https://support.wowwee.com>

We recommend that you retain our address for future reference.

Product and colors may vary.

Keep the instruction sheet for future reference.

Packaging printed in China.

WARNING! This product is not suitable for children under 3 years because of small parts - choking hazard.

WARNING! Do not aim at eyes or face.

CAN ICES-003(B)/NMB-003(B)

MADE IN CHINA

For warranty information, please visit <http://wowwee.com/information/warranty>

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try and correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that which the receiver is connected
- Consult the dealer or experienced radio/TV technician for help

This Device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

WARNING!

This equipment may experience difficulty and/or memory loss when subjected to any electrostatic discharge, radio frequency interference, or sudden power surge/interruption. The user is encouraged to reset the equipment should any of these occur.



8019US01SUN_MIM



ITEM NO: 8019

Age: 5+

USER MANUAL

 
INTRODUCTION

Thank you for purchasing Robosapien™ Remix by WowWee®!

He's 4 robots in 1 and mixes them up for fun... so you never know who you're going to get! Robosapien™ Remix likes to change his mind... all the time! Whether he's an Excited Robot, Silly Robot, Serious Robot, or Confused Robot, Robosapien™ Remix keeps you entertained with 50+ sounds and reactions. Tap, shake, and push his buttons to see what makes him tick! And he has a few tricks up his sleeve, including 4 Arm Launchers, Repeat Voice Warp and Remix Dance Moves!

Take a few minutes to review this user manual before playing.

CONTENTS

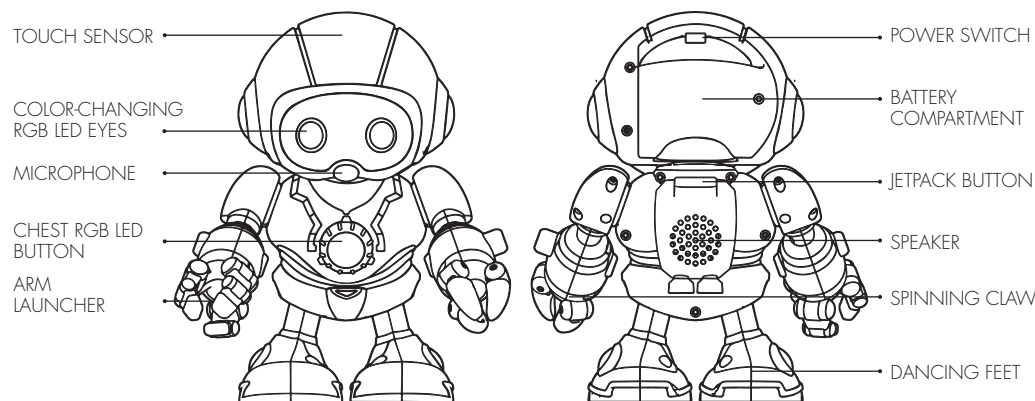

Includes:

1 x Robosapien™ Remix

4 x Arm Launchers

1 x User Manual

Requires 4 x 1.5V AAA "LR03/RO3"

Batteries (not included)

CLAW



MEGA FIST



BOXING GLOVE



PLUNGER



IMPORTANT INFORMATION

TAKE NOTE OF THE FOLLOWING WHEN PLAYING WITH ROBOSAPIEN™ REMIX

- Do not aim Robosapien™ Remix's arm launchers towards a person's face or eyes.
- To avoid discomfort or injury, do not place Robosapien™ Remix on or near a person's head or face.
- As a best practice, we recommend tying up any loose hair when playing with Robosapien™ Remix.
- Do not immerse Robosapien™ Remix or any of its parts in water or any other form of liquid.
- If your Robosapien™ Remix gets dirty, you can spot clean with a clean cloth; do not submerge.
- Do not drop, throw, or kick Robosapien™ Remix as this may damage mechanical functions.
- Do not leave Robosapien™ Remix unattended near edges from which it could fall when dance moves are activated.



Manufactured and distributed by
© 2020 WowWee Group Limited.
All Rights Reserved. Patent Pending.

WowWee Group Limited.

Energy Plaza, 301A-C
92 Granville Road
T.S.T. East, Hong Kong

WowWee Canada Inc.

3700 Saint Patrick Street
Suite 206, Montreal, QC
H4E 1A2, Canada

 
Customer Service

More information on: <https://support.wowwee.com>

HOW TO PLAY


POWER ON & CHANGE THE VOLUME

Toggle between OFF / VOL HIGH / VOL LOW.
Choose between Low Volume and High Volume power settings.
Listen for the power up sound!

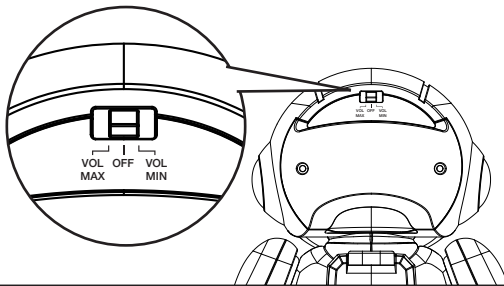

GET READY TO REMIX!

 Robosapien™ Remix mixes up robots each time so you never know who you're going to get.

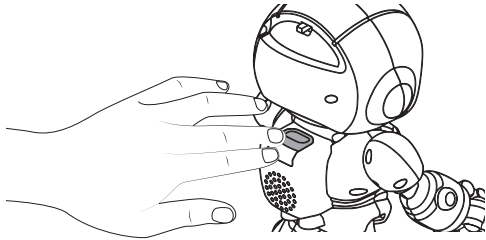


Press once to pick one of Robosapien™ Remix's robots.
Press twice to change to another robot.

DISCOVER EACH ROBOT Discover all of Robosapien™ Remix's personalities and reactions as you play with him!

EXCITED	SILLY	SERIOUS	CONFUSED
White LED	Green LED	Blue LED	Orange LED

 CHEST BUTTON FEATURES

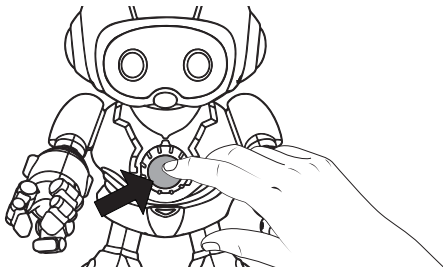


Press once for different Robosapien™ Remix reactions.

Press twice for different Robosapien™ Remix dance moves. Watch him shimmy, shuffle, and step!

Press and hold the chest button to start recording for Repeat Voice Warp. Speak into the microphone for up to 3 seconds

Release to hear Robosapien™ Remix repeat what you say!

 TOUCH SENSOR FEATURES

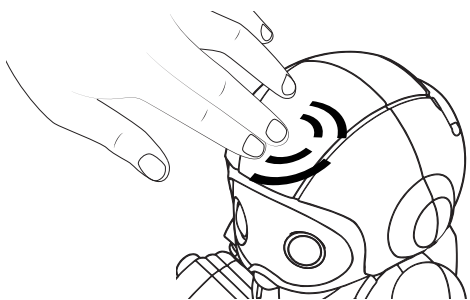

Tap once for different Robosapien™ Remix reactions.

Tap twice to watch Robosapien™ Remix show off more dance moves and boogie to his own beats!

 
Place and hold the palm of your hand on Robosapien™ Remix's head and he'll give you a loyal and friendly nuzzle, just like a pet. Good Robot, Remix!

HOW TO PLAY: CONTINUED


ARM LAUNCHERS

TIME TO LAUNCH!

Choose from one of Robosapien™ Remix's four arm launchers: Claw, Mega Fist, Boxing Glove, or Plunger. Attach to the end of his right arm to lock into place.

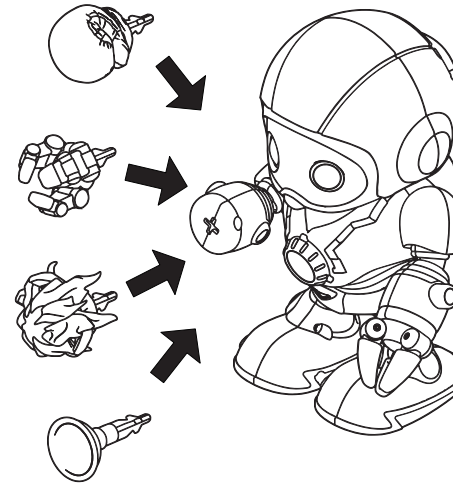


 3, 2, 1...Engage! Press the arm launcher button and watch as Robosapien™ Remix packs a punch! For safety, always avoid aiming towards the eyes or face.

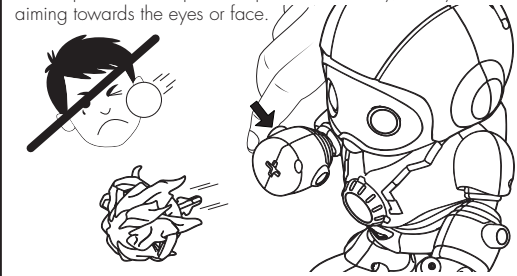


SPIN IT!

 Press the spin button on Robosapien™ Remix's left arm to activate his spinning claw. Spin, spin, spin!

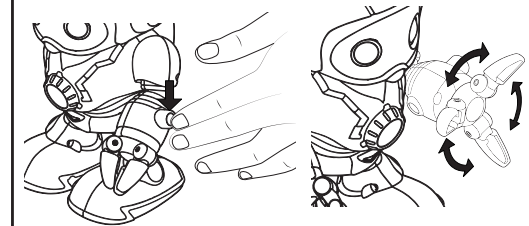


BONUS REACTIONS

 Blast off! Press and hold the Jetpack Button while holding Robosapien Remix face down for a robo-rocket flying sound. Play pretend and imagine Robosapien™ Remix zooming through the room!

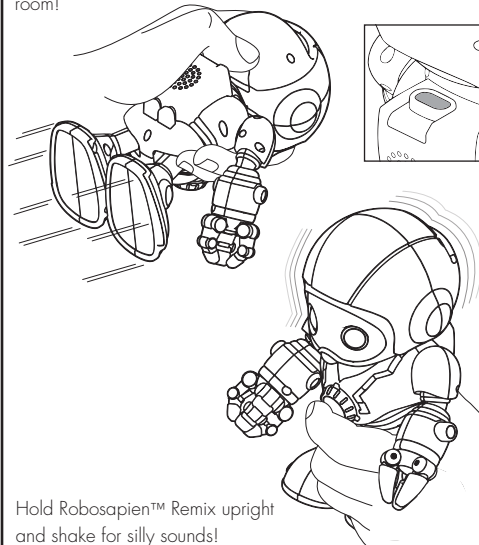

Hold Robosapien™ Remix upright and shake for silly sounds!

 Clap twice! Robosapien™ Remix will react in surprise!

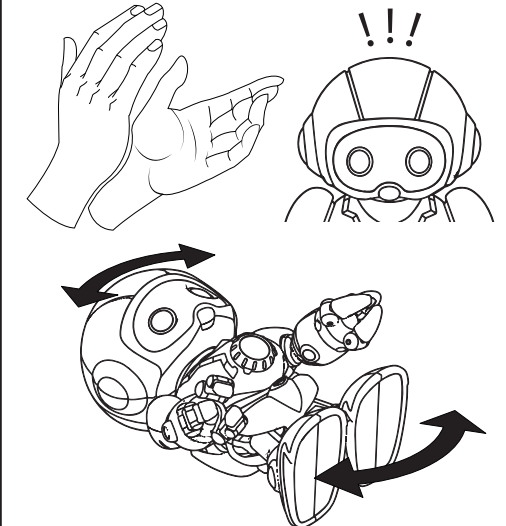

Lay Robosapien™ Remix on his back and watch him wiggle and wriggle!